



# INSTALLATION INSTRUCTIONS

## LRVD1R VON DUPRIN REQUEST-TO-EXIT SWITCH KIT MODELS: 98/99 & 33/35 SERIES

Insert switch assembly into the extrusion with the back of the angle bracket against the inside wall of the extrusion.

Slide the switch assembly toward the device head until it's on top of the push pad baseplate.

Adjust the switch assembly accordingly within the device until the snap action switch makes proper contact with the tailpiece of the exit device, then tighten the set screw to secure in place.

### Installing Switch

### Switch Specification


RED - N/C

GRN - N/O

WHT - COM

3AMP @ 125VAC

RESISTIVE

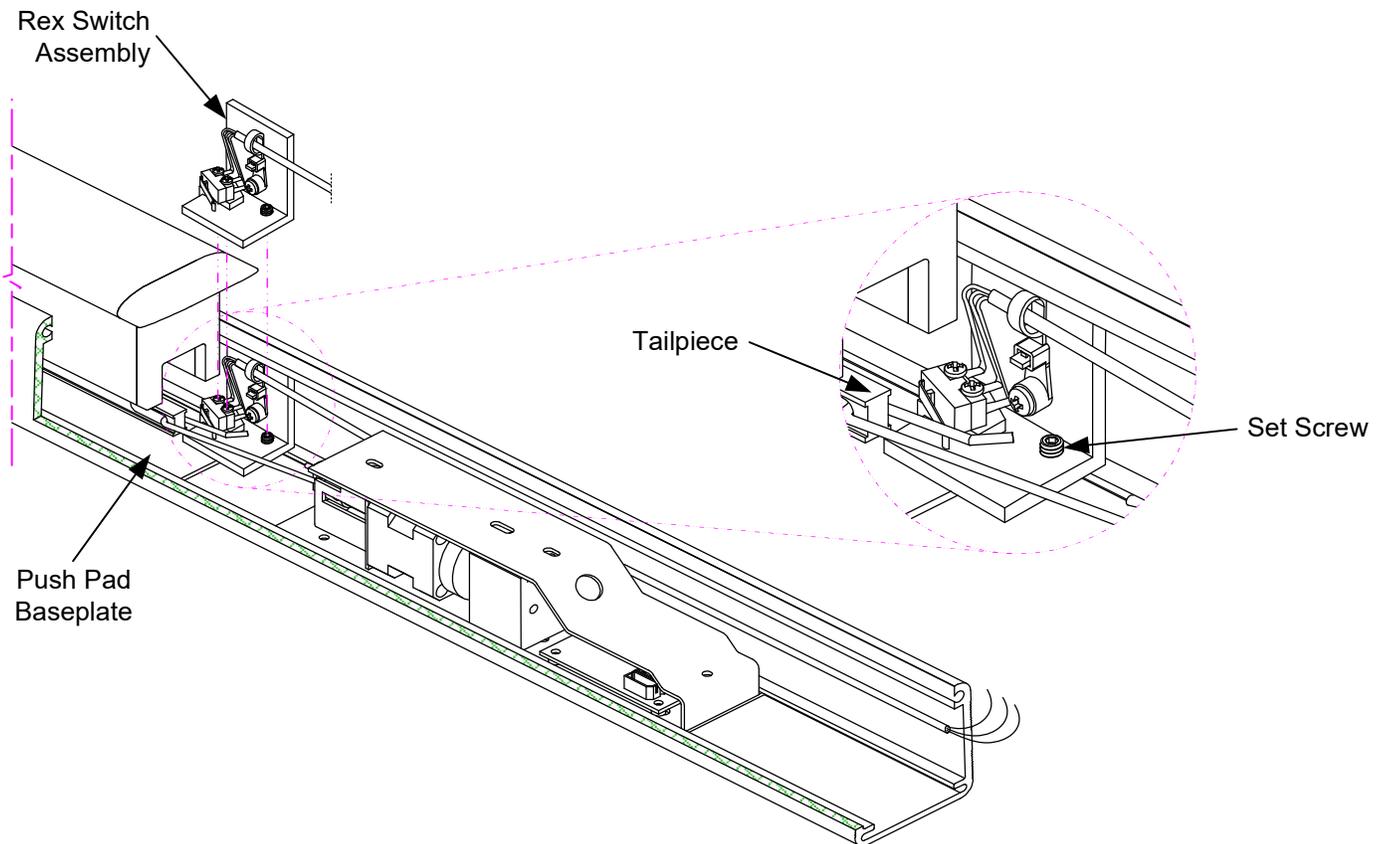




## Optional Height Adjustment

If the contact point with the tailpiece is too low, position the spacer below the snap action switch to raise the contact point.

If the contact point with the tailpiece is too high, place the spacer above the snap action switch to lower the contact point.

### Switch Assembly with Spacer below Switch

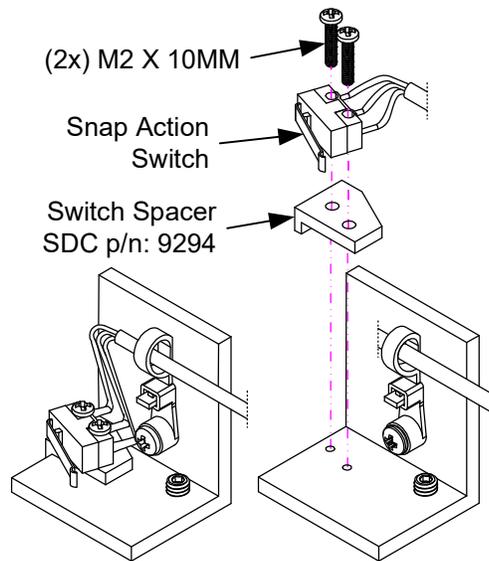

### Switch Assembly with Spacer above Switch

